

PEARL RAPID LOCK HI-HAT CLUTCH


HCL-105QR / HCL-205QR / HCL-205DQR

Instruction Manual


Congratulations on your purchase!

To get optimum performance of your "Rapid Lock" Hi-Hat Clutch, please read this Instruction Manual before playing.


- A : Wing Nut**
- B : Wing Bolt**
- C : Tension Adjustment Nut**
- D : Felt Washers**
- E : Rapid Lock Fastener**

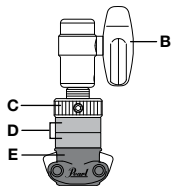

HCL-105QR

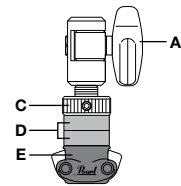

HCL-205QR

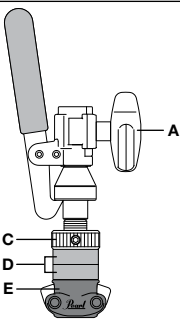

HCL-205DQR

How to Install and Remove Cymbals

Pinch the two Levers located on the sides of the Rapid Lock Fastener to remove it from the Clutch. Place the top cymbal between the two Felt Washers, and replace the Rapid Lock Fastener by pressing it onto the bottom of the clutch until a click sound is heard, and the Levers are fully extended locking it into place. Gently tug on the Rapid Lock Fastener to ensure correct installment. If necessary, rotate the Tension Adjustment Nut to set the tightness/looseness of the cymbal. Place the bottom cymbal on the cup of the Hi-Hat stand, and mount the Rapid Lock Clutch with the Top Hi-Hat Cymbal attached to the Upper Pull Rod. Adjust the distance between the top and bottom cymbals to your preference then secure it into place by tightening the Wing Nut (Wing Bolt for HCL-105QR).

To remove the cymbal from the clutch, remove the Rapid Clutch from the stand and press the two Levers located on the sides of the Rapid Lock Fastener pulling it from the clutch to allow removal of the cymbal.

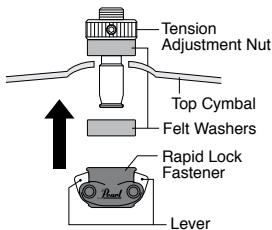


Fig.1


Tension Adjustment Nut Setting

To adjust, rotate the Tension Adjustment Nut until the desired tightness/looseness of the cymbal is achieved. The Tension Adjustment Nut Allen Screw is set at the factory to retain settings and allow for adjustment during use. To lock setting into place, use the supplied Hex Wrench and tighten the Allen Screw rotating it clockwise. (Fig.2).

To return the Allen Screw to the factory setting, ensure the Allen Screw is tight, then using the Hex Wrench loosen it by a quarter turn counter-clockwise.

CAUTION

Do not over tighten the Allen Screw on the Tension Adjustment Nut or damage to clutch threads may occur.

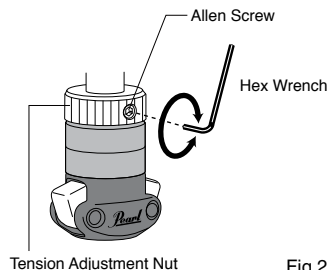


Tension Adjustment Nut

Fig.2

Drop Clutch Function (HCL-205DQR)

The Drop Clutch allows you to play the Hi-Hat Cymbals in closed setting without stepping on the footboard. Striking the Lever disengages the lock allowing the Top Hi-Hat Cymbal to fall into the closed Hi-Hat Cymbal position. Step on the footboard once again to re-engage the lock for regular Hi-Hat playing style (Fig-3).

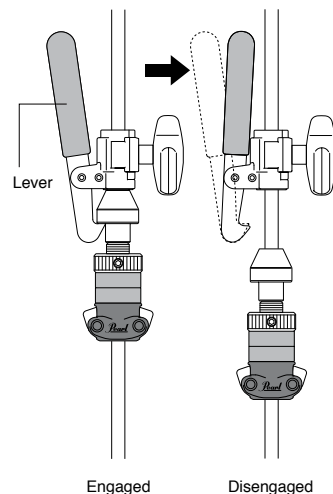

Engaged

Disengaged

Fig.3

CAUTION

Before use check that the Rapid Lock Fastener is installed correctly, Wing Nut / Wing Bolt is tight and the Tension Adjustment Nut is properly set and secured.

Pearl

<http://www.pearldrums.com>

Products and specifications are subject to change without notice.