
## **PEARL CYMBAL HOLDER CH-1030**


Instruction Manual Congratulations on your purchase! To get optimum performance of your CH-1030 Cymbal Holder, please read this Instruction Manual before playing.

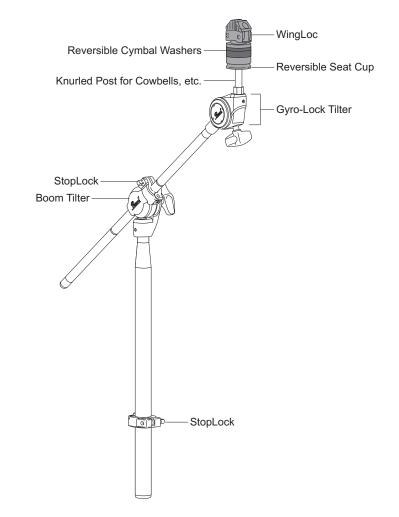

## WingLoc

 
Pearl's patented WingLoc's quick release design makes attaching and removing cymbals quick and easy.

To remove the WingLoc, pull the wings apart and lift the WingLoc straight up (Fig.1).



To attach, keep the wings open and place the WingLoc and the Upper Cymbal Washer over the Cymbal Post as shown (Fig.2).

To adjust, snap either one of the wings upward as shown in Fig.3 and rotate the WingLoc until the desired tightness / looseness of the cymbal is achieved. Snap the other wing upward (Fig.4) to lock the Wing-Loc in place.

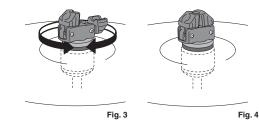

NOTE

Do not force the wings closed. If you feel resistance, rotate the WingLoc slightly to align the threads and try closing the wings again.

Do not tighten the WingLoc when both wings are in the locked position to prevent wear to the threads.

Keep WingLocs in the locked position when transporting to avoid breakage or loss.

Upper Cymbal Washer

Fig. 1

Cymbal Post Fig. 2

Combination Example Felt

Fig. 6


Test the stability of the Holder before using. If necessary, readjust the length of the boom, the direction of the boom until the Holder is sufficiently stable.

http://www.pearldrum.com Products and specifications are subject to change without notice. Printed in China -1212-

## **Reversible Seat Cup**

 **Reversible Cymbal Washer** 

The Seat Cup is reversible and can be set to Float, to allow cymbals to move freely, when set in the position shown in (Fig.5-A) or it can Lock, to prevents rattle in recording situations, when set in the position shown in (Fig.5-B).



CH-1030 stands are equipped with Reversible Cymbal

