DCL-300P DROP CLUTCH

Instruction Manual / 取扱説明書

Congratulations on your purchase! To get optimum performance from your Drop Clutch, please read this Instruction Manual before playing.

The DCL-300P Drop Clutch features minimal contact rubber washers for crisp sound and maximum sound projection, a locking nut to prevent the cymbal from loosening while playing, and our exclusive "no-play" system that maintains perfect contact between the latch and drop portions of the clutch for optimal performance.

この度は、DCL-300Pドロップクラッチをお買い上げいただき誠にありがとうございます。 製品の機能を十分に発揮してお使いいただくために、この取扱説明書をぜひご覧ください。

DCL-300Pドロップクラッチは、ワンタッチでハイハットをクローズに変え、踏み込むと元へ戻るシステムです。

Assemble the Hi-hat Drop Clutch with the Top Hi-hat Cymbal between the Rubber Washers and securely tighten the Bottom Nut as shown in (Fig.1-A). Tighten the Key Bolt to lock the Bottom Nut as shown in (Fig.1-B).


Mount the Drop Clutch with the top cymbal attached to the Pull Rod as shown in (Fig.1).

Adjust the distance between the top and bottom cymbals to your preference then tighten the Wing Bolt on the Drop Clutch to secure.

ドロップクラッチのふたつのラバー(フェルト)ワッシャーの間にトップシンバルをはさみ、ボトムナットのキーボルトを締めて固定します (Fig.1-A, 1-B)。

トップシンバルを取り付けたドロップクラッチをプルロッドにマウントします (Fig.1)。

トップとボトムのシンバルの間隔を好みに合わせて調節し、ドロップクラッチのウイングボルトを締めて固定します。

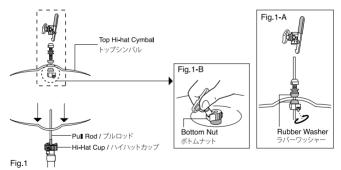

Drop Clutch Adjustment

Over a period of time, play may develop between the latch and drop portions of your Drop Clutch. Should this happen, loosen the Allen screw with the provided Allen wrench and turn the cone-shaped nut until the original fit is restored then re-tighten the Allen screw.

ドロップクラッチの調整

上部ナットの位置が本来の位置からずれてしまった場合には、付属の六角レンチでナット部のアレンスクリューをゆるめ、ナット部を回転させてフックのかかり具合を確かめながら、再びアレンスクリューを十分に締めて下さい。

